

Adjust orchestra Bass Level in a USER SET (Roland FR-1x)

1 select the Dale Mathis User Set – or the Roland factory set in which you would like to adjust the orchestra bass level

2 push and HOLD blue SET button until you see AUD in screen



3 push Register button #4 TEN times until you see obL in screen



4 use Register buttons #1 and #2 to adjust the orchestra bass volume.

(Note) with Dale Mathis User Set #1, the orchestra bass volume is set at STD (standard). To make the orchestra bass softer, keep pushing register button #1 until you find the volume you want.

5 to get out of the EDIT mode, push the blue SET button.

All of these adjustment symbols can be found on page 43 of the 1x owner manual

13. Other settings

The FR-1x has a mode that allows you to make various settings and perform certain operations. Below please find a list of the parameters you can set in this mode.

Display indication	Full name	Setting range	Default	See page
AUD	Audio file name	(file name, 3 characters)	–	p. 33 *3
AUL	Audio Level	Off, 1~10	8	p. 34
bRL	Treble/Bass&Chord Balance	b64~b1,Cen, t1~t63	t15	p. 45
dEt	Musette Detune	Off, 0~15	(variable)	p. 45
EU _n	Master Tune	15.7~40.0~64.3	40.0	p. 45 *1
t-rP	Transpose	-6~0~5	0	p. 45 *1
d-rS	Drum Set	1~8	1	p. 46
d-rL	Drum Level	Low, Med, Hi, -40~Std~+40	Std	p. 46
o L	Orchestra Level	-40~Std~+40	Std	p. 46
oGL	Organ Level	-40~Std~+40	Std	p. 46
obL	Orchestra Bass Level	-40~Std~+40	Std	p. 46
oCL	Orchestra Chord Level	-40~Std~+40	Std	p. 46
oFL	Orchestra Free Bass Level	-40~Std~+40	Std	p. 46
tr _n	Treble Valve Noise	Off, -40~Std~+40	Std	p. 46
bb _n	Bass Button Noise	Off, -40~Std~+40	Std	p. 46
brG	Bass Reed Growl	Off, -40~Std~+40	Std	p. 46
Fb _n	Free Bass Button Noise	Off, -40~Std~+40	Std	p. 47
FrG	Free Bass Reed Growl	Off, -40~Std~+40	Std	p. 47
MEP	Metronome Tempo	20~250	120	p. 47