

## **EDIT a User Program on Roland FR-1x (Page 38 in 1x manual)**

1 Recall the User Program to be edited.

2 **Press** and **HOLD** User Program button

(User Program edit light flashes on Display)

3 Change the settings to new settings

4 **Press** and **HOLD** User Program button – to enter edit/write mode.

5 **Press** Blue SET button to overwrite changes.

6 **Press** User Program button to leave edit mode.